



CALLAWAY SECURITY

Security Solutions from Local Professionals

DSC Home Security System User Guide

Setting Your Alarm (When Leaving Home)

Motion Detectors ON:

- a. Close doors and windows until the green ready light is on.
- b. Press and hold the AWAY button for 2 seconds; the red armed light will come on.
- c. Exit the house.

Setting the Alarm (When at Home with a Delay)

Motion Detectors OFF:

- a. Close doors and windows until no zones show open and the green ready light is on.
- b. Press and hold the STAY button for 2 seconds; the red armed light will come on.

Disarming the System (or Canceling an Accidental Alarm)

- a. The keypad will beep; you have 30 seconds to disarm.
- b. Press the four-digit code, and the red armed light will turn off.

Disarming Before Opening Doors

- a. Press the four-digit code, and the red armed light will turn off.

If an Alarm is Triggered

- A. Verify if the alarm was triggered accidentally. If unsure, wait for a phone call from the central station.
- B. If accidental, enter the four-digit code to silence the alarm and cancel dispatch by calling the monitoring station at 1(800) 554-1104. Give them your passcode.

Changing Your Four-Digit Master Code

- a. Press *5.
- b. Enter your current four-digit Master Code.
- c. Press 40.
- d. Enter your new four-digit Master Code.
- e. Press #.